

OPTISONIC 8300 Technical Datasheet

# Ultrasonic flowmeter for high temperature gas and steam

- Excellent long term stability
- Wide measurement range
- Integrated solution for massflow and enthalpy measurement







1 P	Product features	3
	1.1 Ultrasonic steam flow measurement 1.2 Variants 1.3 Features 1.4 Measuring principle	5 6
2 T	Technical data	8
	2.1 Technical data	
3 Ir	nstallation	20
	3.1 General notes on installation 3.2 Intended use 3.3 Installation requirements signal converter 3.4 Vibration 3.5 General requirements sensor 3.5.1 Inlet and outlet 3.5.2 T-section 3.5.3 Mounting position 3.5.4 Flange deviation 3.5.5 Control valve 3.5.6 Thermal insulation	
4 E	Electrical connections	25
	4.1 Safety instructions	
5 A	Application form	32
6 N	Notes	34

#### 1.1 Ultrasonic steam flow measurement

Due to the increasing cost of steam, accurate measurement is becoming increasingly important. As is prevention of energy losses that can be caused by a pressure drop in the steam line. By providing accurate measurement without pressure drop, the OPTISONIC 8300 provides an optimal solution.

Besides this installation cost of a steam measurement system can be considerable. As the OPTISONIC 8300 provides a large measurement range and does not require recalibration, the installation can be simplified and cost reduced. For example since the flow sensor does not need to be removed, shut off valves and a bypass are not required. And thanks to the large measurement range, a dual range measurement setup is not required.

Traditional steam measurement solutions need continuous attention to guarantee proper operation and for recalibration. As the diagnostics of the OPTISONIC 8300 enables it to look after itself, it does not require any attention.

Even periodically recalibration is not required since the OPTISONIC 8300 provides excellent long term stability. Periodical verification of the proper functioning of the device can easily be done using the diagnostics as required.

With temperature and pressure inputs, the GFC 300 converter will calculate mass flow and enthalpy display in addition to volumetric flow. This omits the need for an additional flowcomputer.



- Tlow sensor with two parallel paths for optimal accuracy
- ② Flanged or weld-in design
- 3 Remote converter

#### Highlights

- Excellent long term stability
- No recalibration required
- Maintenance free
- Diagnostics guarantee proper operation and support verification
- Integrated mass flow and enthalpy calculation according IAPWS-IF97, using pressure and temperature input

#### **Industries**

- Power plants
- Chemical
- Petrochemical

### **Applications**

- Allocation of used steam
- Custody transfer of steam
- Turbine performance measurement
- Boiler performance measurement

### 1.2 Variants



#### Application range

- Diameter range DN100...600 / 4...24", extended range up to DN1000 / 40"
- Temperature up to 540°C
- Pressure standard up to 100 Bar, extended pressure up to 200 Bar

#### **Connection options**

- Flangeless (weld-in) process connection
- Standard flange ratings available up to ASME 600lbs / PN100
- Extended pressure versions up to ASME 1500 lbs / PN250

#### **Output options**

- Uncorrected gas flow speed and volume
- Mass flow and enthalpy by using the integrated flow computer option


#### 1.3 Features



#### Highly accurate flow measurement

Accuracy better than 1% thanks to two parallel path design.

#### Velocity of Sound (VOS) monitoring

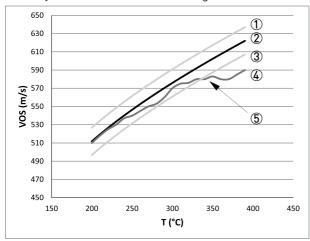

- 1 VOS upper limit
- 2 VOS calculated
- 3 VOS lower limit
- 4 VOS measured
- ⑤ VOS alarm trip

### Diagnostics for verification

The OPTISONIC 8300 provides a number of online diagnostic parameters and functions. For example since the process medium is known, the velocity of sound can be calculated with the input of temperature and pressure. The calculated velocity of sound can be monitored against the measured value. In this way not only the flow sensor is continuously diagnosed but also the temperature and pressure sensor.

In addition, the diagnostics parameters can be used for in-situ verification of the steam flowmeter by comparing diagnostics values recorded at initial calibration or at commissioning, with actual values. In this way accurate and reliable measurement can be guaranteed continuously.



#### Mass flow and energy flow calculation

The OPTISONIC 8300 integrates the functionality of a flow computer in a flowmeter. Two optional current inputs for pressure and temperature allow the OPTISONIC 8300 to provide output like corrected volume flow, mass flow and energy flow. An additional flow computer is not required.

### 1.4 Measuring principle

- Like canoes crossing a river, acoustic signals are transmitted and received along a diagonal measuring path.
- A sound wave going downstream with the flow travels faster than a sound wave going upstream against the flow.
- The difference in transit time is directly proportional to the mean flow velocity of the medium.

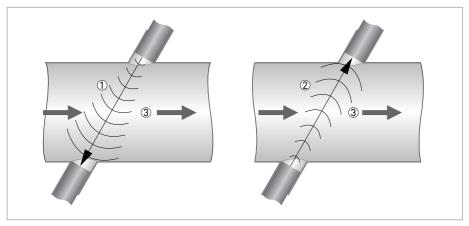


Figure 1-1: Measuring principle

- ① Sound wave against flow direction
- 2 Sound wave with flow direction
- 3 Flow direction

### 2.1 Technical data

- The following data is provided for general applications. If you require data that is more relevant to your specific application, please contact us or your local sales office.
- Additional information (certificates, special tools, software,...) and complete product documentation can be downloaded free of charge from the website (Download Center).

### Measuring system

Measuring principle Ultrasonic transit time		
Application range Flow measurement of super heated steam and other high temp gasses		
Measured value		
Primary measured value	Transit time	
Secondary measured values	Volume flow, enthalpy flow, mass flow, flow speed, flow direction, speed of sound, gain, signal to noise ratio, reliability of flow measurement, quality of acoustic signal	

### Design

Features 1 or 2 path flow sensor with high temperature tranducers.			
Modular construction	The measurement system consists of a measuring sensor and a signal converter.		
Remote version	In field (F) mount version: OPTISONIC 8000 with GFC 300 F signal converter		
Nominal diameter	DN100600 / 424"		
Measurement range	-6060 m/s / -197197 ft/s		
Input / output options			
Inputs / outputs	Current (incl. HART <sup>®</sup> ), pulse, frequency and/or status output, limit switch and/or control input (depending on the I/O version)		
Counters	2 internal counters with a max. of 8 counter places (e.g. for counting volume and/or mass units).		
Self diagnostics	Integrated verification, diagnosis functions, flowmeter, process, measured value, bargraph		
Communication interfaces	Modbus, HART <sup>®</sup> , FF		
Display and user interface			
Graphic display	LC display, backlit white		
	Size: 128x64 pixels, corresponds to 59x31 mm = 2.32"x1.22"		
	Display turnable in 90° steps.		
	The readability of the display could be reduced at ambient temperatures below -25°C / -13°F.		
Operator input elements	4 optical keys for operator control of the signal converter without opening the housing.		
	Option: Infrared interface (GDC)		
Remote control	PACTware <sup>®</sup> including Device Type Manager (DTM)		
	All DTM's and drivers are available at the internet homepage of the manufacturer.		

Display functions		
Menu	Programming of parameters at 2 measured value pages, 1 status page, 1 graphic page (measured values and descriptions adjustable as required).	
Language of display texts	English, French, German	
Units	Metric, British and US units selectable from list / free unit.	

### Measuring accuracy

Volume flow			
Reference conditions for	Medium: air		
calibration	Temperature: 20°C / 68°F		
	Pressure: 1 bar / 14.5 psi		
Air calibration	DN100 / 4": $< \pm 1.5\%$ of actual measured flow rate		
(standard)	DN150600 / 624": < ± 1% of actual measured flow rate		
Repeatability < ± 0.2%			
Mass flow			
Reference conditions for	Medium: Pressurised Natural Gas		
calibration	Temperature: depending on calibration		
	Pressure: depending on calibration		
Pressurised natural gas	Calculations and correction in GFC 300 converter or Summit flow computer.		
calibration (optional)	DN100 / 4": $\leq$ ± 1.5% of actual measured mass flow.		
	DN150600 / 624": $\leq \pm$ 1% of actual measured mass flow.		
Repeatibility	< ± 0.2%		

# Operating conditions

- p - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1				
Temperature				
Process temperature	Standard version: -25+540°C / -13+1004°F			
	Higher temperatures on request.			
Ambient temperature	Sensor: -40+70°C / -40+158°F			
	Signal converter: -40+65°C / -40+149°F			
Storage temperature	-50+70°C / -58+158°F			
Pressure				
Flanged	According to flange standard, maximum pressure limited by transducer material:			
	SS347: 10 MPa at 540°C			
	INCONEL® Alloy 625: 20 MPa at 540°C			
Flangeless (weld in) Acc. to design pressure connection				
Properties of medium				
Physical condition	Super heated steam (>15°C superheat), high temperature gas			
Density	Standard: 0.650 kg/m³ (> 15°C superheat)			
Velocity of sound	450750 m/s			

### Installation conditions

Installation For detailed information see chapter "Installation".	
Inlet run ≥ 20 DN	
Outlet run	≥ 3 DN
Dimensions and weights	For detailed information see chapter "Dimensions and weights".

#### **Materials**

Sensor				
Flanges	Standard: carbon steel ASTM A105 N			
	Optional: high temperature steel like for example P-11, P-22			
Tube	Standard: carbon steel ASTM A106 Gr. B or equivalent			
	(For flangeless design: according to pipe specification)			
	Optional: high temperature steel like for example P-11, P-22			
Transducer nozzles Carbon steel compatible with tube material				
Transducers	Standard: stainless steel 347 (UNS S34700, W. nr.:1.4550)			
	High pressure: INCONEL® Alloy 625 (UNS N06625, W. nr.:2.4856)			
Tube transducer cabling Stainless steel 316 L (1.4401)				
Connection box	Die-cast aluminium; polyurethane coated			
Converter housing				
Field version	Standard: die-cast aluminium, polyurethane coated			
	Option: stainless steel 316 L (1.4408)			

#### **Electrical connections**

Power supply	Standard
	100230 VAC (-15% / +10%), 50/60 Hz
	Option
	24 VDC (-55% / +30%)
	24 VAC/DC (AC: -15% / +10%; DC: -25% / +30%)
Power consumption	AC: 22 VA
	DC: 12 W
Signal cable	MR02 (shielded cable with 2 triax cores): Ø 10.6 mm; 1 cable per acoustic path
	5 m / 16 ft
	Option: max. 30m / 90 ft
Cable entries	Standard: M20 x 1.5
	Option: ½" NPT, PF ½

### Inputs and outputs

General	All in-and outputs are galvanically isolated from each other and from all other circuits.				
Description of used abbreviations	U <sub>ext</sub> = external voltage U <sub>nom</sub> = nominal voltage U <sub>int</sub> = internal voltage U <sub>o</sub> = terminal voltage R <sub>L</sub> = resistance of load I <sub>nom</sub> = nominal current				
Current output					
Output data	Measurement of volume communication.	Measurement of volume, enthalpy and mass (at constant density), HART® communication.			
Settings	Without HART®				
	Q = 0%: 015 mA				
	Q = 100%: 1020 mA				
	Error identification: 3	22 mA			
<b>With HART®</b> Q = 0%: 415 mA					
	Q = 100%: 1020 mA				
	Error identification: 3	22 mA			
Operating data	Basic I/Os	Modular I/Os	Ex-i		
Active	U <sub>int</sub> = 24 VDC		U <sub>int</sub> = 20 VDC		
	I ≤ 22 mA		I ≤ 22 mA		
	$R_L \le 1 \text{ k}\Omega$		$R_L \le 450 \Omega$		
			$U_0 = 21 \text{ V}$ $I_0 = 90 \text{ mA}$ $P_0 = 0.5 \text{ W}$ $C_0 = 90 \text{ nF} / L_0 = 2 \text{ mH}$ $C_0 = 110 \text{ nF} /$ $L_0 = 0.5 \text{ mH}$		
Passive	U <sub>ext</sub> ≤ 32 VDC		U <sub>ext</sub> ≤ 32 VDC		
	I ≤ 22 mA		I ≤ 22 mA		
	$U_0 \ge 1.8 \text{ V}$ $R_{L} \le \left( U_{\text{ext}} - U_{\text{o}} \right) / I_{\text{max}}$		U <sub>0</sub> ≥ 4 V		
			$R_L \le (U_{ext} - U_0) / I_{max}$		
			$U_{l} = 30 \text{ V}$ $I_{l} = 100 \text{ mA}$ $P_{l} = 1 \text{ W}$ $C_{l} = 10 \text{ nF}$ $L_{l} = 0 \text{ mH}$		

HART <sup>®</sup>					
Description	HART <sup>®</sup> protocol via active and passive current output				
	HART <sup>®</sup> version: V5				
	Universal HART® par	Universal HART® parameter: completely integrated			
Load	$\geq$ 250 $\Omega$ at HART <sup>®</sup> te Note maximum load	$\geq$ 250 $\Omega$ at HART $^{\!0}$ test point: Note maximum load for current output!			
Multidrop	Yes, current output =	Yes, current output = 4 mA			
	Multidrop addresses	Multidrop addresses adjustable in operation menu 115			
Device drivers	HART <sup>®</sup> , AMS DD / FD	DT / DTM			
Pulse or frequency o	utput				
Output data	Pulse output: volume	e, enthalpy or mass counting			
	Frequency output: vo density, flow speed,	olume flow, enthalpy flow, mas velocity of sound, gain	s flow, specific enthalpy,		
Function	Adjustable as pulse	of frequency output			
Settings		10000 pulses per second or pu			
	-	ble as automatic, symmetric or			
Operating data	Basic I/Os	Modular I/Os	Ex-i		
Active	-	U <sub>int</sub> = 24 VDC			
		f <sub>max</sub> in operating menu set to: <b>f</b> <sub>max</sub> ≤ 100 Hζ:			
		I ≤ 20 mA			
		$R_{L, max} = 47 \text{ k}\Omega$			
		open: I ≤ 0.05 mA closed: U <sub>0,nom</sub> = 24 V at I = 20 mA			
		$f_{max}$ in operating menu set to: 100 Hz < $f_{max} \le 10 \text{ kH}\zeta$ :			
		I ≤ 20 mA			
		$\begin{aligned} R_L &\leq 10 \text{ k}\Omega \text{ for } f \leq 1 \text{ kHz} \\ R_L &\leq 1 \text{ k}\Omega \text{ for } f \leq 10 \text{ kHz} \end{aligned}$			
		open: $I \le 0.05 \text{ mA}$ closed: $U_{0,\text{nom}} = 22.5 \text{ V at}$ I = 1  mA $U_{0,\text{nom}} = 21.5 \text{ V at}$ I = 10  mA $U_{0,\text{nom}} = 19 \text{ V at}$ I = 20  mA			

Passive	U <sub>ext</sub> ≤ 32 VDC	-	
	$f_{max}$ in operating menu set to: $f_{max} \le 100$ Hζ:		
	I ≤ 100 mA		
	$R_{L, max} = 47 \text{ k}\Omega$ $R_{L, max} = (U_{ext} - U_0) / I_{max}$		
	open: $I \le 0.05$ mA at $U_{ext} = 32$ VDC closed: $U_{0, max} = 0.2$ V at $I \le 10$ mA $U_{0, max} = 2$ V at $I \le 100$ mA		
	$f_{max}$ in operating menu se 100 Hz < $f_{max} \le 10 \text{ kH}\zeta$ :	et to:	
	I ≤ 20 mA		
	$R_L \le 10 \text{ k}\Omega \text{ for } f \le 1 \text{ kHz}$ $R_L \le 1 \text{ k}\Omega \text{ for } f \le 10 \text{ kHz}$ $R_{L, \text{max}} = (U_{\text{ext}} - U_0) / I_{\text{max}}$		
open: $I \leq 0.05 \text{ mA at } U_{ext} = 32 \text{ VDC}$ closed: $U_{0, \text{ max}} = 1.5 \text{ V at } I \leq 1 \text{ mA}$ $U_{0, \text{ max}} = 2.5 \text{ V at } I \leq 10 \text{ mA}$ $U_{0, \text{ max}} = 5.0 \text{ V at } I \leq 20 \text{ mA}$		4	
NAMUR	- Passive to EN 60947-5-6		Passive to EN 60947-5-6
	open: I <sub>nom</sub> = 0.6 mA closed: I <sub>nom</sub> = 3.8 mA		open: I <sub>nom</sub> = 0.43 mA closed: I <sub>nom</sub> = 4.5 mA
		$U_{I} = 30 \text{ V}$ $I_{I} = 100 \text{ mA}$ $P_{I} = 1 \text{ W}$ $C_{I} = 10 \text{ nF}$ $L_{I} = 0 \text{ mH}$	

Status output / limit swi	tch					
Function and settings	Settable as indicator for direction of flow, overflow, error, operating point.					
	Status and/or control: ON or OFF					
Operating data	Basic I/Os	Modular I/Os	Ex-i			
Active	-	U <sub>int</sub> = 24 VDC	-			
		I ≤ 20 mA				
		$R_{L, \text{max}} = 47 \text{ k}\Omega$				
		open: $I \le 0.05 \text{ mA}$ closed: $U_{0, \text{ nom}} = 24 \text{ V}$ at $I = 20 \text{ mA}$				
Passive	U <sub>ext</sub> ≤ 32 VDC	U <sub>ext</sub> ≤ 32 VDC	-			
	I ≤ 100 mA	I ≤ 100 mA				
	$R_{L, max} = 47 \text{ k}\Omega$ $R_{L, max} = \left[ U_{ext} - U_0 \right] /$ $I_{max}$	$R_{L, max} = 47 k\Omega$ $R_{L, max} = \{U_{ext} - U_0\} /$ $I_{max}$				
	open: $I \leq 0.05 \text{ mA at}$ $U_{ext} = 32 \text{ VDC}$ $closed:$ $U_{0, \text{ max}} = 0.2 \text{ V at}$ $I \leq 10 \text{ mA}$ $U_{0, \text{ max}} = 2 \text{ V at}$ $I \leq 100 \text{ mA}$	open: $I \leq 0.05 \text{ mA at}$ $U_{ext} = 32 \text{ VDC}$ closed: $U_{0, \text{ max}} = 0.2 \text{ V at}$ $I \leq 10 \text{ mA}$ $U_{0, \text{ max}} = 2 \text{ V at}$ $I \leq 100 \text{ mA}$				
NAMUR	-	Passive to EN 60947-5-6	Passive to EN 60947-5-6			
		open: I <sub>nom</sub> = 0.6 mA closed: I <sub>nom</sub> = 3.8 mA	open: I <sub>nom</sub> = 0.43 mA closed: I <sub>nom</sub> = 4.5 mA			
			$U_{I} = 30 \text{ V}$ $I_{I} = 100 \text{ mA}$ $P_{I} = 1 \text{ W}$ $C_{I} = 10 \text{ nF}$ $L_{I} = 0 \text{ mH}$			

Control input	Cokvolus states sur	- to "-one" - one-t				
Function	· ·	Set value of the outputs to "zero", counter and error reset, range cl				
Operating data	Basic I/Os	Modular I/Os	Ex-i			
Active	-	U <sub>int</sub> = 24 VDC	-			
		Terminals open: U <sub>0, nom</sub> = 22 V				
		Terminals bridged: I <sub>nom</sub> = 4 mA				
		On: $U_0 \le 10 \text{ V with}$ $I_{\text{nom}} = 1.9 \text{ mA}$				
		Off: $U_0 \ge 12 \text{ V with}$ $I_{\text{nom}} = 1.9 \text{ mA}$				
Passive	U <sub>ext</sub> ≤ 32 VDC	U <sub>ext</sub> ≤ 32 VDC	U <sub>ext</sub> ≤ 32 VDC			
	$I_{max} = 6.5 \text{ mA at}$ $U_{ext} \le 24 \text{ VDC}$	$I_{max} = 9.5 \text{ mA at}$ $U_{ext} \le 24 \text{ V}$	$I \le 6$ mA at $U_{ext} = 24$ V $I \le 6.6$ mA at $U_{ext} = 32$ V			
	$I_{max} = 8.2 \text{ mA at}$ $U_{ext} \le 32 \text{ VDC}$	$I_{\text{max}} = 9.5 \text{ mA at}$ $U_{\text{ext}} \le 32 \text{ V}$	On: $U_0 \ge 5.5 \text{ V or } I \ge 4 \text{ mA}$ Off:			
	Contact closed (On): $U_0 \ge 8 \text{ V with}$ $I_{\text{nom}} = 2.8 \text{ mA}$	Contact closed (On): $U_0 \ge 3 \text{ V with}$ $I_{nom} = 1.9 \text{ mA}$	$U_0 \le 3.5 \text{ V or } I \le 0.5 \text{ mA}$ $U_1 = 30 \text{ V}$			
	Contact open (Off): $U_0 \le 2.5 \text{ V with}$ $I_{nom} = 0.4 \text{ mA}$	Contact open (Off): $U_0 \le 2.5 \text{ V with}$ $I_{\text{nom}} = 1.9 \text{ mA}$	$I_{l} = 100 \text{ mA}$ $P_{l} = 1 \text{ W}$ $C_{l} = 10 \text{ nF}$ $L_{l} = 0 \text{ mH}$			
NAMUR	-	Active to EN 60947-5-6	-			
		Contact open: U <sub>0, nom</sub> = 8.7 V				
		Contact closed (On): I <sub>nom</sub> = 7.8 mA				
		Contact open (off): $U_{0, nom} = 6.3 \text{ W}$ with $I_{nom} = 1.9 \text{ mA}$				
		Identification for open terminals: $U_0 \ge 8.1 \text{ V}$ with $I \le 0.1 \text{ mA}$				
		Identification for short circuited terminals: $U_0 \le 1.2 \text{ V}$ with $I \ge 6.7 \text{ mA}$				

Low-flow cutoff								
On	0±9.999 m/s; 020 and pulse output.	0±9.999 m/s; 020.0%, settable in 0.1% steps, separately for each current and pulse output.						
Off	0±9.999 m/s; 019 and pulse output.	0±9.999 m/s; 019.0%, settable in 0.1% steps, separately for each current and pulse output.						
Time constant								
Function	Can be set together f current, pulse and frocounters.	Can be set together for all flow indicators and outputs, or separately for: current, pulse and frequency output, and for limit switches and the 3 internal counters.						
Time setting	0100 seconds, sett	able in 0.1 second steps.						
Current input	·							
Function	For conversion to sta pressure transmitter	indard conditions, input from ers is required.	xternal temperature and					
Operating data	Basic I/Os	Modular I/Os	Exi					
Active	-	U <sub>int</sub> = 24 VDC	U <sub>int</sub> = 20 VDC					
		I ≤ 22 mA	I ≤ 22 mA					
		I <sub>max</sub> ≤ 26 mA (electronically limited)	$U_{0, min} = 14 \text{ V}$ at $I \le 22 \text{ mA}$					
		$U_{0, min} = 19 \text{ V}$ at $I \le 22 \text{ mA}$	No HART®					
		No HART®	$U_0 = 24.1 \text{ V}$ $I_0 = 99 \text{ mA}$ $P_0 = 0.6 \text{ W}$ $C_0 = 75 \text{ nF} / L_0 = 0.5 \text{ mH}$					
			No HART®					
Passive	-	U <sub>ext</sub> ≤ 32 VDC	U <sub>ext</sub> ≤ 32 VDC					
		I ≤ 22 mA	I ≤ 22 mA					
		I <sub>max</sub> ≤ 26 mA (electronically limited)	$U_{0, min} = 4 V$ at $I \le 22 \text{ mA}$					
		$U_{0, min} = 5 \text{ V}$ at $I \le 22 \text{ mA}$	No HART®					
		No HART®	$U_{l} = 30 \text{ V}$ $I_{l} = 100 \text{ mA}$ $P_{l} = 1 \text{ W}$ $C_{l} = 10 \text{ nF}$ $L_{l} = 0 \text{ mH}$					
			No HART®					

MODBUS (in preparation)	MODBUS (in preparation)				
Description	Modbus RTU, Master / Slave, RS485				
Address range	1247				
Supported function codes	03, 04, 16				
Broadcast	Supported with function code 16				
Supported Baudrate	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud				

### Approvals and certificates

CE				
	This device fulfills the statutory requirements of the EC directives. The manufacturer certifies successful testing of the product by applying the CE mark.			
Electromagnetic	Directive: 2004/108/EC, NAMUR NE21/04			
compatibility	Harmonized standard: EN 61326-1 : 2006			
Low Voltage Directive	Directive: 2006/95/EC			
	Harmonized standard: EN 61010 : 2001			
Pressure Equipment	Directive: 97/23/EC			
Directive	Category I, II or SEP			
	Fluid group 1			
	Production module H			
Other approvals and stan	dards			
Non-Ex	Standard			
Namur	NE 21, 45, 53, 80			
Hazardous areas				
	For detailed information, please refer to the relevant Ex documentation.			
ATEX	DEKRA 12 ATEX 0063 X			
Protection category acc.	Signal converter			
to IEC 529 / EN 60529	Field (F): IP 65 (NEMA 4X/6)			
	All flow sensors			
	IP 67 (NEMA 6)			
Vibration resistance	IEC 68-2-64			
Shock resistance	IEC 68-2-27			

### 2.2 Dimensions and weights

#### 2.2.1 Flow sensor

The OPTISONIC 8300 will primarily be welded to the connecting piping. The design of the tube of the OPTISONIC 8300 will be based on the specifications of the connecting piping. Detailed information for the dimensions and weights can not be specified as they will vary with each application. The information below should therefore be regarded as indicative.

Please note size d, the required extra space for installation and maintenance of the transducers.

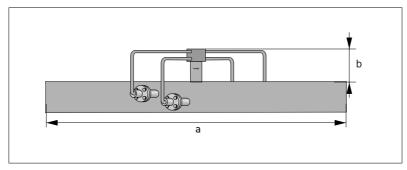


Figure 2-1: Front view of the GFS 8000

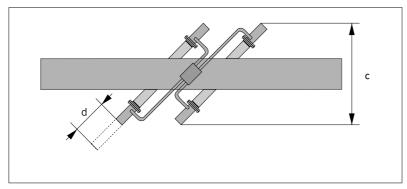


Figure 2-2: Upper view of the GFS 8000

#### Dimensions of the GFS 8000 in mm and inches

	[mm]	[inches]
а	DN100 / 4": 1000	DN100 / 4": 39.37
	DN150600 / 624": 2000	DN150600 / 624": 87.74
b	265	10.43
С	Transducer flange rating 600 lbs: 1184 + Di	600 lbs: 46.61 + Di
	Transducer flange rating 1500 lbs: 1205 + Di	1500 lbs: 47.44 + Di
d	300	11.81

### 2.2.2 Converter housing

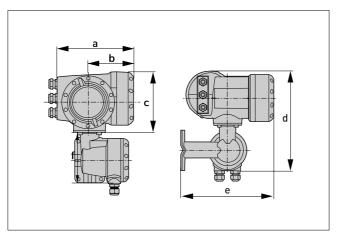


Figure 2-3: Field housing (F) - remote version.


### Dimensions and weights in mm and kg

Dimensions [m	Weight						
а	b	С	d	е	[kg]		
202	120	155	295.8	277	5.7		

### Dimensions and weights in inches and lb

Dimensions [inches]					Weight			
a	b	С	d	е	[lb]			
7.75	4.75	6.10	11.60	10.90	12.60			

### 2.2.3 Mounting plate, field housing

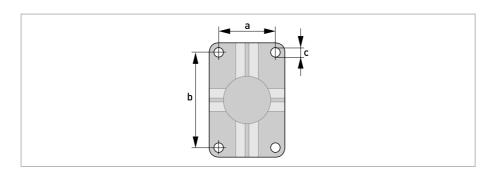

#### Dimensions in mm and inches

	[mm]	[inches]
а	60	2.4
b	100	3.9
С	Ø 9	Ø 0.4

#### 3.1 General notes on installation

Inspect the packaging carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.

Do a check of the packing list to make sure that you have all the elements given in the order.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

### 3.2 Intended use

Responsibility for the use of the measuring devices with regard to suitability, intended use and corrosion resistance of the used materials against the measured fluid lies solely with the operator.

The manufacturer is not liable for any damage resulting from improper use or use for other than the intended purpose.

The overall functionality of the **OPTISONIC 8300** flowmeter is the continuous measurement of actual volume flow, enthalpy flow, mass flow, flow speed, velocity of sound, gain, SNR and diagnosis value. The working area is defined in the next figure.

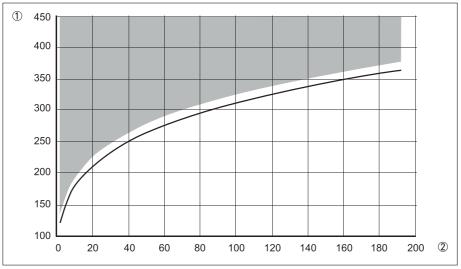


Figure 3-1: Steam saturation curve

- ① Temperature [°C]
- 2 Pressure [Bara]

### 3.3 Installation requirements signal converter

- Allow 10...20 cm / 3.9...7.9" of space at the sides and rear of the signal converter to permit free air circulation.
- Protect signal converter against direct solar radiation, install a sunshield if necessary.
- Signal converters installed in switchgear cabinets require adequate cooling, e.g. by fan or heat exchanger.
- Do not expose the signal converter to intense vibration.

#### 3.4 Vibration

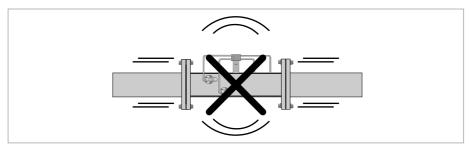


Figure 3-2: Avoid vibrations

### 3.5 General requirements sensor

To secure the optimum functioning of the flowmeter, please note the following observations.

- Install the flow sensor in a horizontal position in a slightly descending line.
- Do not install the flow sensor in a lowered pipe section to avoid that water can collect in the measuring tube.
- Orientate the flow sensor such that the path of the acoustic signal is in the horizontal plane.

For exchanging the transducers, please keep a free space of 0.3 m / 11.81" around the transducer.

#### 3.5.1 Inlet and outlet

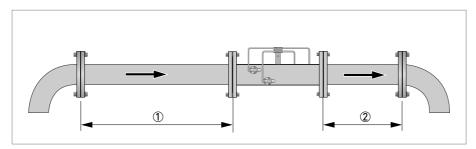


Figure 3-3: Recommended inlet and outlet

- ① ≥ 20 DN
- ② ≥ 3 DN

#### 3.5.2 T-section

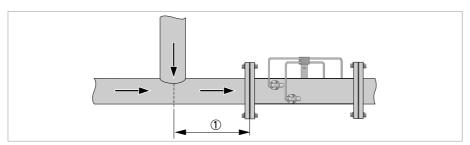


Figure 3-4: Distance behind a T-section

① ≥ 20 DN

### 3.5.3 Mounting position

• Horizontally with the acoustic path in horizontal plane

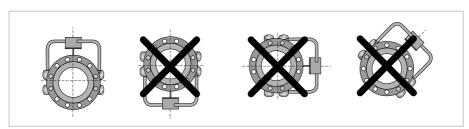


Figure 3-5: Mounting position

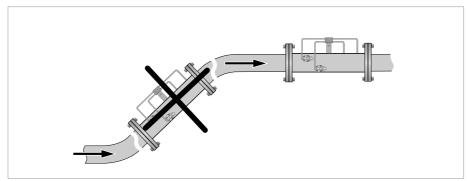


Figure 3-6: Horizontal mounting

Orientate connection box upwards and acoustic path(s) horizontally to avoid liquid in transducers.

### 3.5.4 Flange deviation

Max. permissible deviation of pipe flange faces:  $L_{max} - L_{min} \le 0.5 \text{ mm} / 0.02$ "

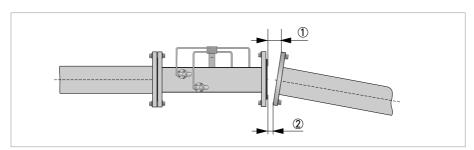


Figure 3-7: Flange deviation

- ① L<sub>max</sub>
- $\ \ 2 \ L_{min}$

#### 3.5.5 Control valve

To avoid distorted flow profiles and interference caused by valve noise in the sensor, control valves or pressure reducers should not be installed in the same pipeline as the flowmeter. In case this is required, please contact the manufacturer.

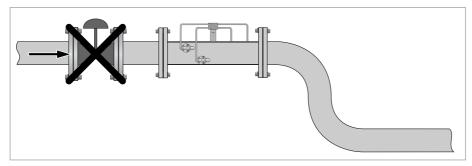


Figure 3-8: Control valve

#### 3.5.6 Thermal insulation

The flow sensor must be insulated to prevent humidity problems caused by condensation. Please make sure that the insulation is installed in accordance with the next image.

Keep the transducers and connection box free of insulation to allow cooling by free convection. The transducers can reach a temperature of up to 200°C!

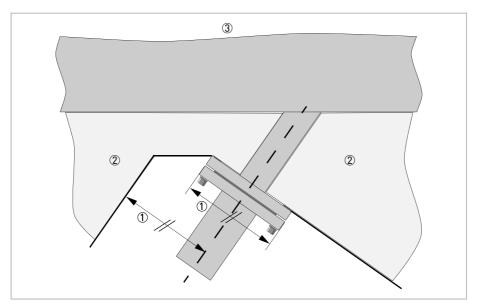


Figure 3-9: Thermal insulation

- ① Width of flange = free distance
- 2 Insulation
- 3 Sensor tube

### 4.1 Safety instructions

All work on the electrical connections may only be carried out with the power disconnected. Take note of the voltage data on the nameplate!

Observe the national regulations for electrical installations!

For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.

Observe without fail the local occupational health and safety regulations. Any work done on the electrical components of the measuring device may only be carried out by properly trained specialists.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

### 4.2 Signal cable OPTISONIC 8000 Sensor


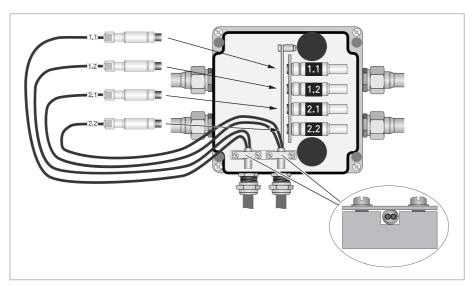


Figure 4-1: Connection of cables in connection box on sensor

# 4.3 Signal cable converter

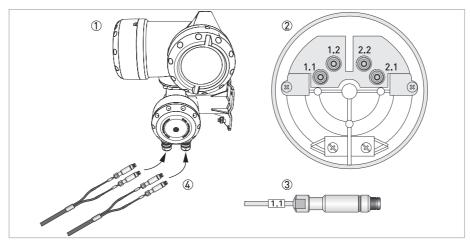

- ① Converter housing.
- ② Open connection box.
- 3 Marking on cable.
- 4 Insert cables through cable glands.

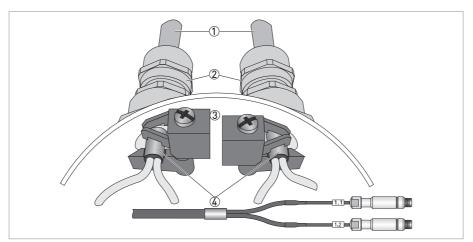


Figure 4-2: Clamp the cables on the shielding bush.

- ① Cables.
- ② Cable glands.
- ③ Grounding clamps.
- 4 Cable with metal shielding bush.

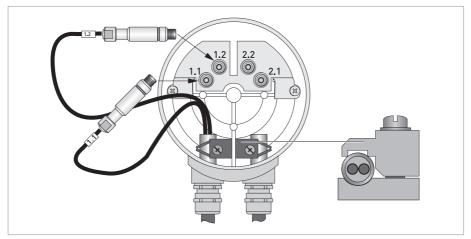


Figure 4-3: Connect the cables on the signal converter.


### 4.4 Power supply

When this device is intended for permanent connection to the mains.

It is required (for example for service) to mount an external switch or circuit breaker near the device for disconnection from the mains. It shall be easily reachable by the operator and marked as the disconnecting the device for this equipment.

The switch or circuit breaker and wiring has to be suitable for the application and shall also be in accordance with the local (safety) requirements of the (building) installation (e.g. IEC 60947-1/-3)

The power terminals in the terminal compartments are equipped with additional hinged lids to prevent accidental contact.

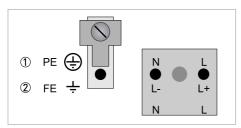

- (1) 100...230 VAC (-15% / +10%), 22 VA
- ② 24 VAC/DC (AC: -15% / +10%; DC: -25% / +30%), 22 VA or 12 W

The device must be grounded in accordance with regulations in order to protect personnel against electric shocks.

#### 100...230 VAC

- Connect the protective ground conductor PE of the mains power supply to the separate terminal in the terminal compartment of the signal converter.
- Connect the live conductor to the L terminal and the neutral conductor to the N terminal.

#### 24 VAC/DC

- Connect a functional ground FE to the separate U-clamp terminal in the terminal compartment of the signal converter.
- When connecting to functional extra-low voltages, provide a facility for protective separation (PELV) (VDE 0100 / VDE 0106 and/or IEC 364 / IEC 536 or relevant national regulations).

### 4.5 Inputs and outputs, overview

#### 4.5.1 Combinations of the inputs/outputs (I/Os)

This signal converter is available with various input/output combinations.

#### Ex i version

• Current outputs can be active or passive.

#### Modular version

• Depending on the task, the device can be configured with various output modules.

#### Bus systems

- For hazardous areas, all of the input/output variants for the housing designs with terminal compartment in the Ex d (pressure-resistant casing) or Ex e (increased safety) versions can be delivered.
- Please refer to the separate instructions for connection and operation of the Ex-devices.

#### 4.5.2 Description of the CG number



Figure 4-4: Marking (CG number) of the electronics module and input/output variants

- ① ID number: 6
- ② ID number: 0 = standard
- 3 Power supply option
- Display (language versions)
- ⑤ Input/output version (I/O)
- 6 1st optional module for connection terminal A
- 2nd optional module for connection terminal B

The last 3 digits of the CG number (⑤, ⑥ and ⑦) indicate the assignment of the terminal connections. Please see the following examples.

#### Examples for CG number

CG 360 11 100	100230 VAC & standard display; basic I/O: I <sub>a</sub> or I <sub>p</sub> & S <sub>p</sub> /C <sub>p</sub> & S <sub>p</sub> & P <sub>p</sub> /S <sub>p</sub>
CG 360 11 7FK	100230 VAC & standard display; modular I/0: $I_a$ & $P_N/S_N$ and optional module $P_N/S_N$ & $C_N$
CG 360 81 4EB	24 VDC & standard display; modular I/0: I <sub>a</sub> & P <sub>a</sub> /S <sub>a</sub> and optional module P <sub>p</sub> /S <sub>p</sub> & I <sub>p</sub>

# Description of abbreviations and CG identifier for possible optional modules on terminals A and B $\,$

Abbreviation	Identifier for CG No.	Description
I <sub>a</sub>	Α	Active current output
I <sub>p</sub>	В	Passive current output
P <sub>a</sub> / S <sub>a</sub>	С	Active pulse output, frequency output, status output or limit switch (changeable)
$P_p/S_p$	Е	Passive pulse output, frequency output, status output or limit switch (changeable)
P <sub>N</sub> / S <sub>N</sub>	F	Passive pulse output, frequency output, status output or limit switch acc. to NAMUR (changeable)
C <sub>a</sub>	G	Active control input
C <sub>p</sub>	K	Passive control input
C <sub>N</sub>	Н	Active control input to NAMUR Signal converter monitors cable breaks and short circuits acc. to EN 60947-5-6. Errors indicated on LC display. Error messages possible via status output.
IIn <sub>a</sub>	Р	Active current input
IIn <sub>p</sub>	R	Passive current input
-	8	No additional module installed
-	0	No further module possible

### 4.5.3 Fixed, non-alterable input/output versions

This signal converter is available with various input/output combinations.

- The grey boxes in the tables denote unassigned or unused connection terminals.
- In the table, only the final digits of the CG no. are depicted.
- Connection terminal A+ is only operable in the basic input/output version.

CG-No.	Connection terminals								
	A+	A	A-	В	B-	С	C-	D	D-

### Basic in-/output (I/O) (Standard)

100	I <sub>p</sub> + HART <sup>®</sup>	passive ①	S <sub>p</sub> / C <sub>p</sub> passive ②	S <sub>p</sub> passive	P <sub>p</sub> / S <sub>p</sub> passive ②
	I <sub>a</sub> + HART <sup>®</sup> active ①				

#### Ex-i in-/outputs (Option)

200			I <sub>a</sub> + HART <sup>®</sup> active	P <sub>N</sub> /S <sub>N</sub> NAMUR ②
3 0 0			I <sub>p</sub> + HART <sup>®</sup> passive	P <sub>N</sub> /S <sub>N</sub> NAMUR ②
2 1 0	I <sub>a</sub> active	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>a</sub> + HART <sup>®</sup> active	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
3 1 0	I <sub>a</sub> active	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>p</sub> + HART <sup>®</sup> passive	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
2 2 0	I <sub>p</sub> passive	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>a</sub> + HART <sup>®</sup> active	P <sub>N</sub> / S <sub>N</sub> NAMUR ②
3 2 0	I <sub>p</sub> passive	P <sub>N</sub> / S <sub>N</sub> NAMUR C <sub>p</sub> passive ②	I <sub>p</sub> + HART <sup>®</sup> passive	P <sub>N</sub> / S <sub>N</sub> NAMUR ②

① Function changed by reconnecting

② Changeable

### 4.5.4 Alterable input/output versions

This signal converter is available with various input/output combinations.

- The grey boxes in the tables denote unassigned or unused connection terminals.
- In the table, only the final digits of the CG no. are depicted.
- Term. = (connection) terminal

CG	Connection terminals								
no.	A+	A	Α-	В	B-	С	C-	D	D-

### Modular IOs (option)

4	max. 2 optional modules for term. A + B	I <sub>a</sub> + HART <sup>®</sup> active	P <sub>a</sub> / S <sub>a</sub> active ①
8	max. 2 optional modules for term. A + B	I <sub>p</sub> + HART <sup>®</sup> passive	P <sub>a</sub> / S <sub>a</sub> active ①
6	max. 2 optional modules for term. A + B	I <sub>a</sub> + HART <sup>®</sup> active	P <sub>p</sub> / S <sub>p</sub> passive ①
B	max. 2 optional modules for term. A + B	I <sub>p</sub> + HART <sup>®</sup> passive	P <sub>p</sub> / S <sub>p</sub> passive ①
7	max. 2 optional modules for term. A + B	I <sub>a</sub> + HART <sup>®</sup> active	P <sub>N</sub> / S <sub>N</sub> NAMUR ①
C	max. 2 optional modules for term. A + B	I <sub>p</sub> + HART <sup>®</sup> passive	P <sub>N</sub> / S <sub>N</sub> NAMUR ①

### Modbus (Option)

G ②	max. 2 optional modules for term. A + B	Common	Sign. B (D1)	Sign. A (D0)
H 3	max. 2 optional modules for term. A + B	Common	Sign. B (D1)	Sign. A (D0)

① Changeable

② Not activated bus terminator

<sup>3</sup> Activated bus terminator

Please fill in this form and fax or email it to your local representive. Please include a sketch of the pipe layout as well, including the X, Y, Z dimensions.

#### **Customer information:**

Date:	
Submitted by:	
Company:	
Address:	
Telephone:	
Fax:	
E-mail:	

### Flow application data:

i tow application data.	
Reference information (name, tag etc):	
New application Existing application, currently using:	
Measurement objective:	
Medium	
Gas composition:	
CO <sub>2</sub> content:	
H <sub>2</sub> content:	
Density:	
Velocity of sound:	
Flowrate	
Normal:	
Minimum:	
Maximum:	
Temperature	
Normal:	
Minimum:	
Maximum:	
Pressure	
Normal:	
Minimum:	
Maximum:	

# Piping details


Nominal pipe size:  Outer diameter:  Wall thickness / schedule:  Pipe material:  Pipe condition (old / new / painted / internal scaling / exterior rust):  Liner material:  Liner thickness:  Straight inlet / outlet section (DN):  Upstream situation (elbows, valves, pumps):  Flow orientation (vertical up / horizontal / vertical down / other):		
Wall thickness / schedule:  Pipe material:  Pipe condition (old / new / painted / internal scaling / exterior rust):  Liner material:  Liner thickness:  Straight inlet / outlet section (DN):  Upstream situation (elbows, valves, pumps):  Flow orientation (vertical up / horizontal	Nominal pipe size:	
Pipe material:  Pipe condition (old / new / painted / internal scaling / exterior rust):  Liner material:  Liner thickness:  Straight inlet / outlet section (DN):  Upstream situation (elbows, valves, pumps):  Flow orientation (vertical up / horizontal	Outer diameter:	
Pipe condition (old / new / painted / internal scaling / exterior rust):  Liner material:  Liner thickness:  Straight inlet / outlet section (DN):  Upstream situation (elbows, valves, pumps):  Flow orientation (vertical up / horizontal	Wall thickness / schedule:	
Liner material:  Liner thickness:  Straight inlet / outlet section (DN):  Upstream situation (elbows, valves, pumps):  Flow orientation (vertical up / horizontal	Pipe material:	
Liner thickness:  Straight inlet / outlet section (DN):  Upstream situation (elbows, valves, pumps):  Flow orientation (vertical up / horizontal	Pipe condition (old / new / painted / internal scaling / exterior rust):	
Straight inlet / outlet section (DN):  Upstream situation (elbows, valves, pumps):  Flow orientation (vertical up / horizontal	Liner material:	
Upstream situation (elbows, valves, pumps):  Flow orientation (vertical up / horizontal	Liner thickness:	
(elbows, valves, pumps):  Flow orientation (vertical up / horizontal	Straight inlet / outlet section (DN):	
Flow orientation (vertical up / horizontal / vertical down / other):		
	Flow orientation (vertical up / horizontal / vertical down / other):	


#### **Environment details**

Corrosive atmosphere:	
Sea water:	
High humidity (% R.H.)	
Nuclear (radiation):	
Hazardous area:	
Additional details:	

### Hardware requirements:

Accuracy requested (percentage of rate):	
Power supply (voltage, AC / DC):	
Analog output (4-20 mA)	
Pulse (specify minimum pulse width, pulse value):	
Digital protocol:	
Options:	
Remote mounted signal converter:	
Specify cable length:	
Accessories:	

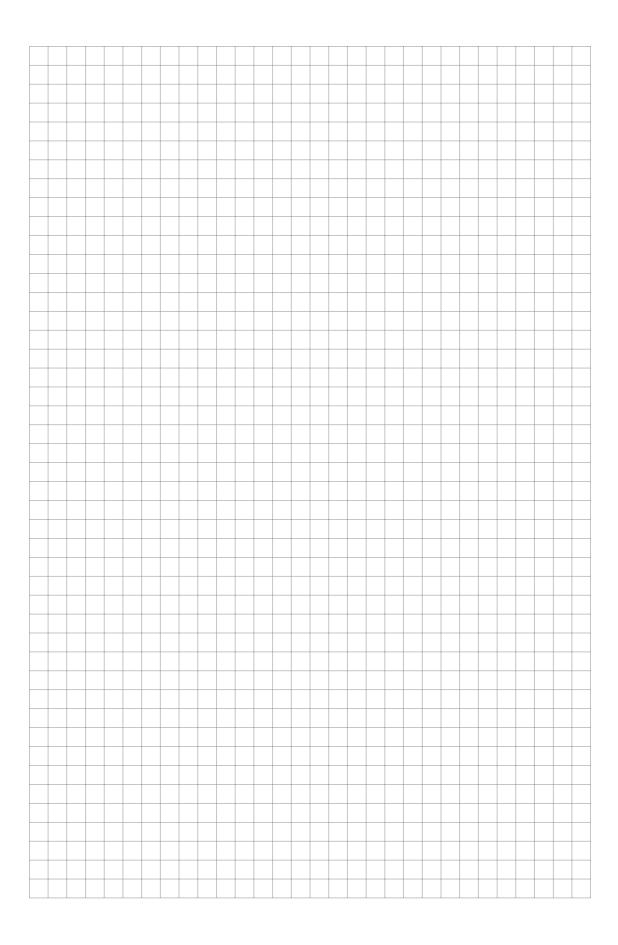

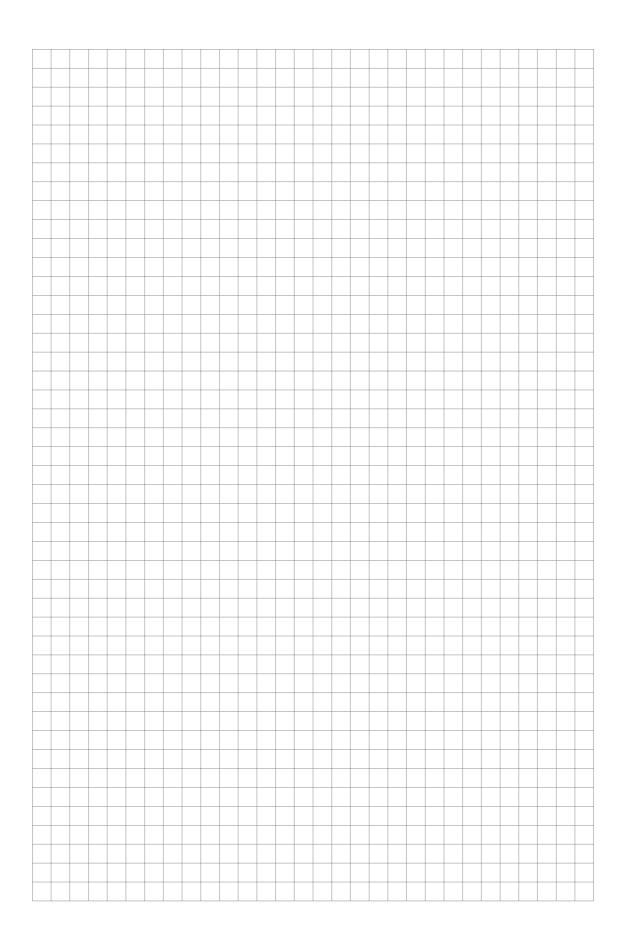



#### **KROHNE** product overview

- Electromagnetic flowmeters
- Variable area flowmeters
- Ultrasonic flowmeters
- Mass flowmeters
- Vortex flowmeters
- Flow controllers
- Level meters
- Temperature assemblies
- Pressure transmitters
- Analysis products
- Products and systems for the oil & gas industry
- Measuring systems for the marine industry

Head Office KROHNE Messtechnik GmbH Ludwig-Krohne-Str. 5 47058 Duisburg (Germany) Tel.:+49 203 301 0 Fax:+49 203 301 103 89 info@krohne.com

The current list of all KROHNE contacts and addresses can be found at: www.krohne.com

